


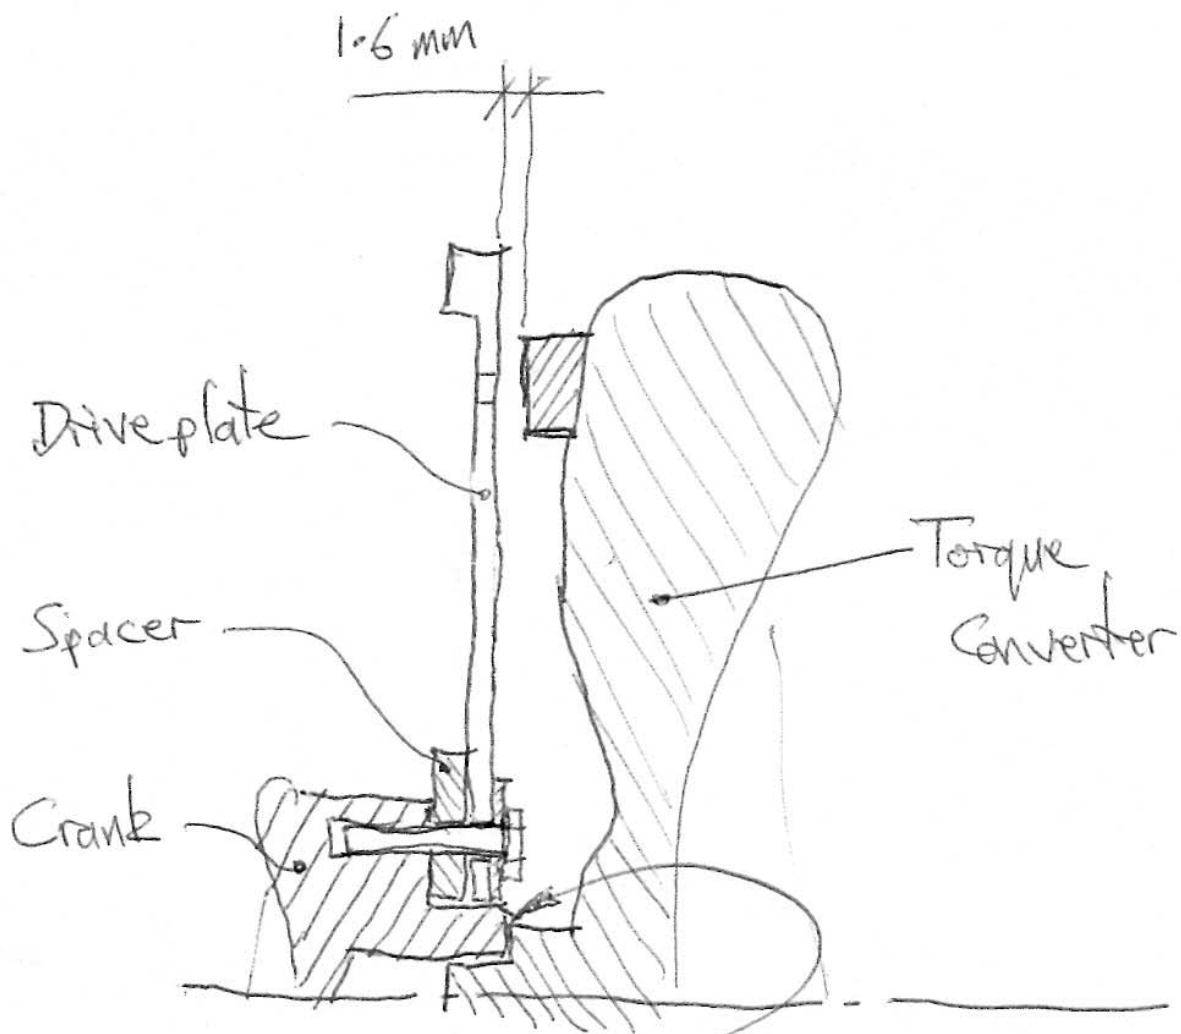

Shoulder on spigot hard against crank. Approx 2mm gap at boss.

Witness marks on boss and drive plate show it was originally bolted tight.

Is a $\pm 2\text{mm}$ ok acceptable or should washers be used between boss and drive plate?